



Original manual for FUXTEC 20V 1A charger

Intended Use

This charger is exclusively intended for charging batteries of the FUXTEC 20 Volt series. The device is not intended for commercial use. Any other use or modification of the device is considered improper use and involves considerable risk of accidents. The manufacturer accepts no liability for damage resulting from improper use.

Use and handling of the battery tool

Only charge the batteries in chargers recommended by the manufacturer.

For a charger that is suitable for a particular type of battery poses a risk of fire when used with other batteries.

Only use the rechargeable batteries provided for this purpose in battery tools. The use from other batteries may cause injury and fire.

Keep the unused battery away from paper clips, coins, keys and nails, screws or other small metal objects that can bridge the contacts of the could cause. A short circuit between the battery contacts can cause burns or fire

The liquid may leak from the battery if used incorrectly. Avoid contact with it. In case of accidental contact, rinse with water. If the liquid enters the eyes, you will need to seek additional medical attention. Leaking battery fluid can cause skin irritation or burns.

Do not use a damaged or modified battery. Damaged or modified batteries may behave unpredictably and cause fire, explosion or injury.

Do not expose a battery to fire or excessive temperatures. Fire or temperatures above 130°C/ 265°F may cause an explosion.

Follow all charging instructions and never charge the battery or battery tool outside the temperature range specified in the operating instructions.

Incorrect charging or charging outside the approved temperature range can destroy the battery and increase the risk of fire.

Charging the battery

- The battery must be charged before first use.
- Press the locking key (3) and remove the battery from the machine.
- Insert the battery pack in the charger.
- Connect the battery charger to the power supply. The charging status is indicated by the control lamps (4).
- Insert the battery pack into the device and ensure that it clicks into place correctly. Check the remaining capacity of the battery pack.
- Press the key (2). The remaining capacity of the battery is indicated by the control lamps(1).

DISPOSAL



WARNING!

Make used power tools unusable before disposal:

- mains-operated power tools by removing the connecting plug,
- battery operated power tools by removing the battery.



For EU countries only

Do not throw power tools in household waste! According to the European Directive 2012/19/EC on waste electrical and electronic equipment and its implementation in national law, used electrical equipment must be collected separately and sent for environmentally sound recycling. Raw material recovery instead of waste disposal. Appliance, accessories and packaging should be



recycled in an environmentally friendly way. Plastic parts are marked for recycling according to type.

WARNING!

Do not throw batteries in the household waste, fire or water. Do not open spent batteries. Batteries should be collected, recycled or disposed of in an environmentally friendly way.

For EU countries only: According to Directive 2006/66/EC, defective or used batteries must be recycled.

NOTE

Please contact your local authority/city for information on disposal options.

Technical data

Part Number	
Battery Type	Li-Ion
Rated Voltage	230 V~, 50 Hz
Rated Power	25 W
Charging voltage	20.9 V=
Charge current	1A
Protection class	II

Accessories

You can purchase the following accessories at www.fuxtec.de

	Accessories
	Battery Pack 4Ah
	Battery Pack 2Ah
	2.4 A fast charger
	2*2.4 A double charger