

Original-User Manual

Folding Wagon



WARNING: Before starting work, please read the operating manual carefully, as it contains all the important information and safety instructions that must be followed in order to use this equipment properly.



Original User Manual FUXTEC Folding/Foldable Wagon

Scope of delivery

- (1) Folding/Foldable Wagon
- (2) Fabric Cover
- (3) Interior extension (depends on model)

Instructions and product information

Please read the instructions carefully before use and observe them. If the instructions are not read carefully before use and the instructions are not followed, the safety of your child cannot be guaranteed.

Only children aged 3-6 years and no more than two children may be transported at the same time.

The wagon can also be used to transport equipment of any kind up to 75 KG, e.g. beach accessories, food etc.

The sunroof provides shade and thus, protection from the sun. The roof is removable.

The integrated basket on the back of the wagon is not removable and therefore cannot be lost. The fabric is removable and can be cleaned if necessary.

Instructions for regular inspection, maintenance and cleaning:

To clean the wagon, first, remove any coarse dirt or foreign objects and then clean the fabric with a damp tissue.

Please do not use detergents or other chemicals to clean the item.

Warning

Note: Before using the wagon, check that everything is correctly assembled and fixed.

Note: Make sure that the entry and exit of the wagon are only on plane surfaces.

Note: Adults should always help children to get in and out of the wagon. Make sure that your child is fastened in their seat belt when you move away from the wagon.

Check that the metal ring for the seat belt of the restraint system is tight. If your model has a parking brake, this must be activated on the wagon when the child gets in and out. To do this, press the brake pedal.

Note: Only load the bag of the rear basket up to max.: 3kg.

Note: Do not sit on the wagon!

Note: Do not use the restraint system with small children!

Note: Never leave your child unattended!

Note: Do not sit on the edge of the wagon as this may cause it to tip over!

Note: Do not simply drive or pull the wagon with its wheels against raised areas (e.g. kerbs) as this may cause the axle to bend or break (in the event of damage due to non-observance, you have no warranty claim).

Advice: Position both front wheels parallel to the raised area (e.g. kerb) and then lift them slightly. When driving down from a raised area, also align the front wheels parallel and support the wagon slightly.

Note: Please do not lean on the rear push handle (depending on model) or put a lot of weight on it. The push handle is intended for your comfort, but cannot be compared to the handling of a pushchair. Excessive pressure will break the joints!

Note: The interior extension (depending on model) is clipped onto the frame from the outside. For this reason, it is not suitable for storing bags or similar items. Weights of more than 2kg cause damage to the fastenings and should therefore be avoided!

Safety instruction

Note: The product is not suitable for mounting on a vehicle.

Only adults are allowed to install the product.

The wagon is not suitable for transporting hot objects such as food, drinks, pans, grills, hotplates, etc.

Do not load the wagon with a weight over 75kg.

Be careful when opening and closing the wagon, as there is a risk of jamming the frame.

Do not attach the wagon to a bicycle or motorised vehicle.

Note: This product is not suitable for attachment to a vehicle - if you do attach the product to a vehicle, we issue the following warning:

"Make sure that your child is adequately protected and secured."

Assembly instructions



Step 1: Open the velcro fasteners of the carrying bag and make sure that the front and rear handles do not interlock.



(Optional for specific models such as CT500)
Please unlock the black or red clip on the side before opening.
If not unlocked, there is a risk of breakage.
Pull the clip and only then unfold the wagon.



Step 2: Pull the front and rear frame rails apart and unfold the wagon to a fully extended position.



Step 3 (optional): If you want to use the roof, pull the carbon rails out of the frame at the corners.



Step 4: Place the roof over the top of the extended rails provided for this purpose with the cap on the ending in the cut-out section of the plastic corner reinforcements. Do not use any other reducing parts inside the plastic corner reinforcement.



Step 5: (View from inside part of the roof) Secure all four corners of the canopy.
Note: The reinforcements of the plastic corners are on the inside of the canopy.



Step 6: Fold the wagon as follows:
Slide the roof rod, if extended, back into the fixture. Pull up the loop in the wagon and fold the wagon. Fasten the velcro to the frame.



Note:

Please remove the interior extension (depending on the model) from your wagon before folding it up. Otherwise, the holding fixtures of the extension will be damaged.

If you have any questions or problems, please contact:

FUXTEC GmbH
Kappstraße 69
71083 Herrenberg – Germany
Email: info@fuxtec.co.uk